Warranty Information

PASGO faucet warrants the original purchase (must have prove of purchase)that such product is free from defect in materials or workmanship for as long as the original consumer purchaser owns their home from the date of purchase. This warranty is limited to but not including labor charges incurred in/or damages sustained during installation, repair or replacement, nor incidental or consequential damages. This warranty does not cover items which are received secondary finishing or have been altered or modified after purchase, or for defects raised by physical abuse to or misuse of the product. This warranty gives the original purchaser of a PASGO faucet specific legal rights which may vary from state to state or from province to province. In some states or provinces the exclusion or limitation incidental or consequential damages is not allowed,for those exclusions may not apply to you.

Thank you for your purchase

PASGO®

Kitchen & Bath

Parts Diagram

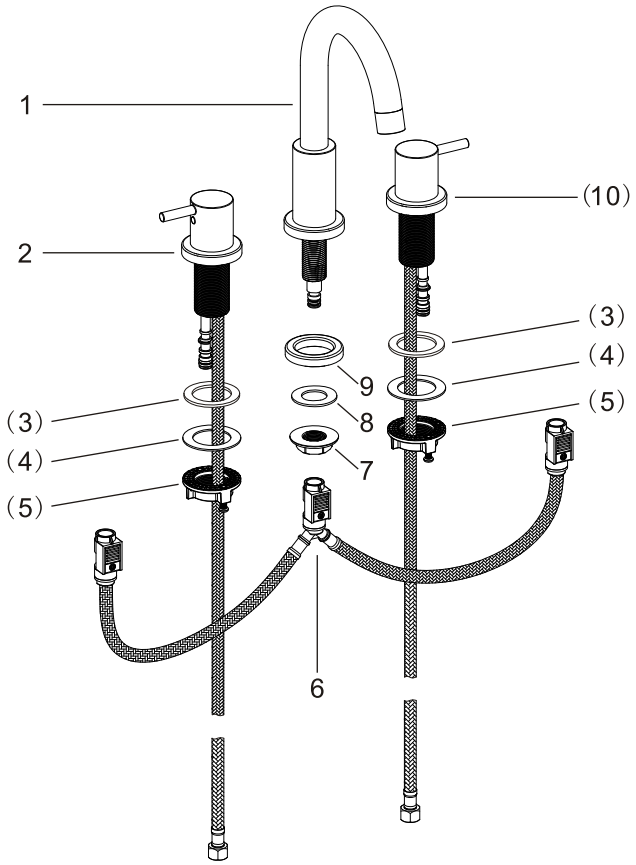

Parts List

NO.	NAME
1	Spout
2	Hot water valve
3	Rubber ring
4	S/S plate
5	Locked nut
6	Fast connection rubber tube
7	Fixing nut
8	Rubber ring
9	Base ring
10	Cold water valve

REMARK:CLEAN THE PIPE BEFORE INSTALLATION.

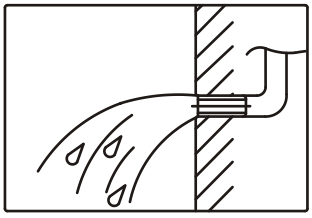

In order to avoid the obstruction of faucet, must to clean the impurigties and sludge of pipe, before assembly.

Proposition 65：For more information: www. P65WARNIGS.CA.GOV

FAUCET INSTALLATION STEPS

1. Before installation, make sure there are three holes (Φ32mm)on the table top. Refer to draft (A).
2. Take off the fixing screw, s/s waving plate and plastic plate (except the rubber ring), and put the inlet pipe go throught the hole. Refer to draft (B)
3. Use fixing set fix faucet body & valve part with fixing set under table,then install fast connection rubber tube and flexible hose. Refer to draft(C)
4. Connect the angle valve and tighten it by wrench. Close the switch of faucet and open the switch of angle valve, keep pressure for 30 minutes, to check if it leaks at all connections. Refer to draft (D).

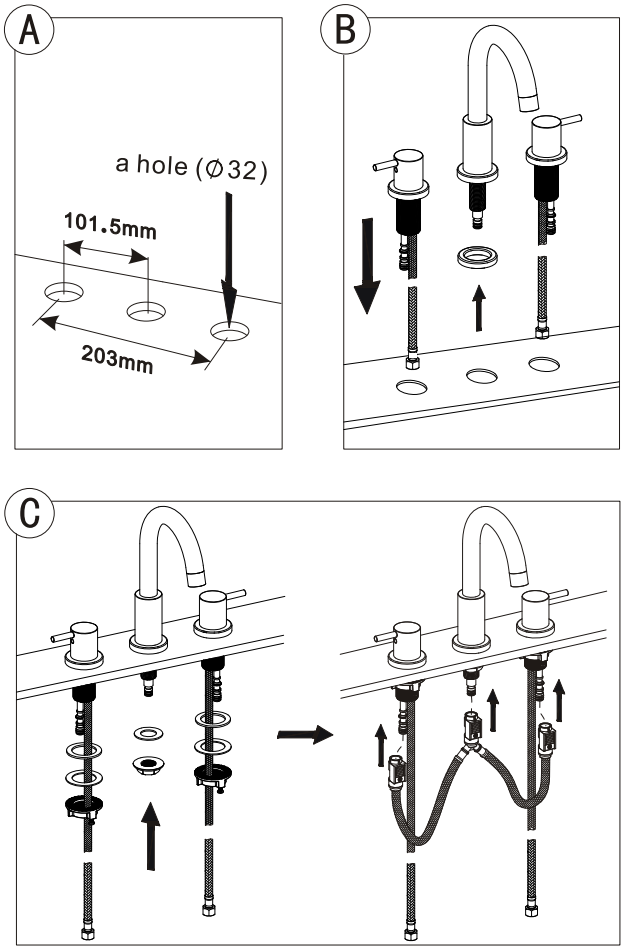

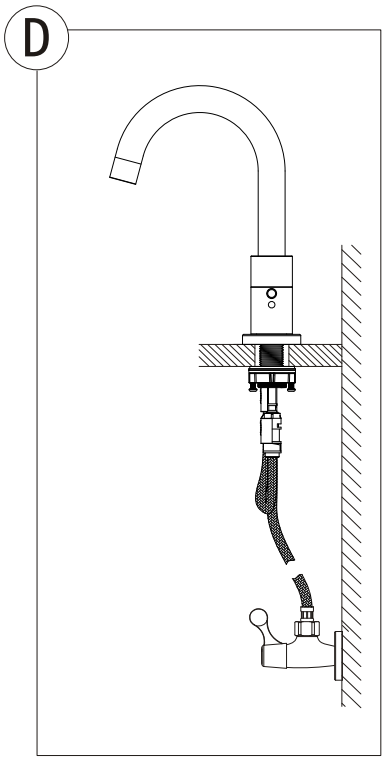

INSTRUCTIONS

Turn the left handle anticlockwise to open the hot water.The larger the angle is, the larger the flow is. Reset is closed.
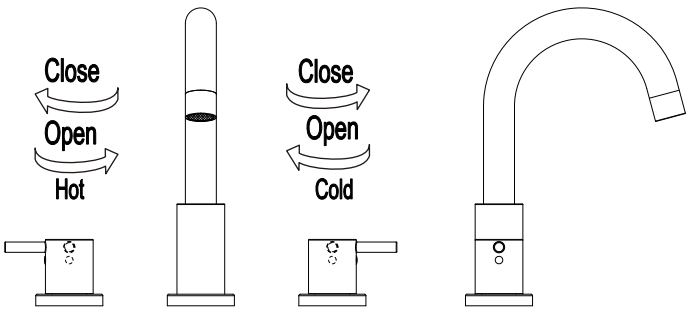
Turn the right handle clockwise to open the cold water.The larger the angle is, the larger the flow is. Reset is closed.